


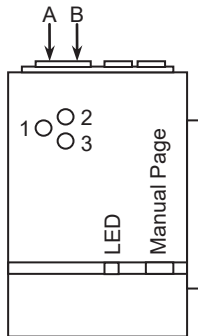


# Programming

The Pager must learn the transmitter's code before it can receive signals from the transmitter.

- 1) Turn the Pager OFF.
- 2) Press and hold the  /  / OFF switch and slide it to the  position.
- 3) Continue holding for 3 seconds until the pager beeps once.
- 4) The PAGE LED will flash GREEN at a steady rate. The ZONE LED will be solid Orange.  
-This means the pager is ready to learn the page code of the transmitter.
- 5) Press the manual page button on the transmitter.
  - This will send the page signal to the pager.
  - The pager will beep twice and the LEDs will turn off to indicate the code has been learned.
  - The pager will beep five times in four minutes if no code is learned.



- 6) Move the  /  / OFF switch back to the OFF position.